
Stacker FOW TO RUN & FEEDS DOWN A SINGLE CABLE USING A STACKER/DESTACKER & COMBINERS

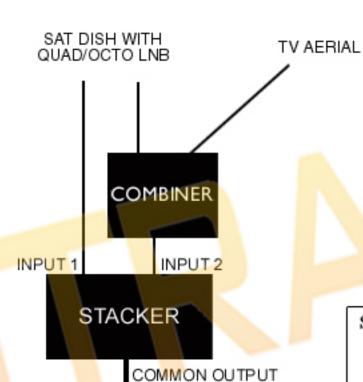



IMPORTANT

ON COMBINER, THE RED LINES INDICATE SATELLITE FEED INPUT/OUTPUT

Stacker Specifications

LNB 1 Input: 950-2150MHz

LNB 2 Input: 47-2150MHz

Common Output: 47-3850MHz

Destacker Specifications

Common Input: 47-3850MHz
 LNB 1 Output: 950-2150MHz
 LNB 2 Output: 47-2150MHz

IMPORTANT

INPUTS & OUTPUTS ON STACKER/DESTACKER MUST BE WIRED EXACTLY AS SHOWN IN DIAGRAM

COMMON INPUT

DESTACKER

OUTPUT 1 OUTPUT 2

COMBINER COMBINER IN REVERSE

SAT FEEDS TO DUAL TUNER FREESAT+ BOX

AERIAL FEED TO TV WITH SAORVIEW TUNER

HUMAX FOXSAT-HDR

Note: Same setup would also work with any dual tuner satellite receivers including SKY+ or Sky+ HD boxes

FREESAT+ BOX

RECEIVER CONNECTED TO TV VIA HDMI CABLE