


# Combining Saorsat & Freesat Using 1 Dish & Offset Arm with 2 LNBs

## Outside

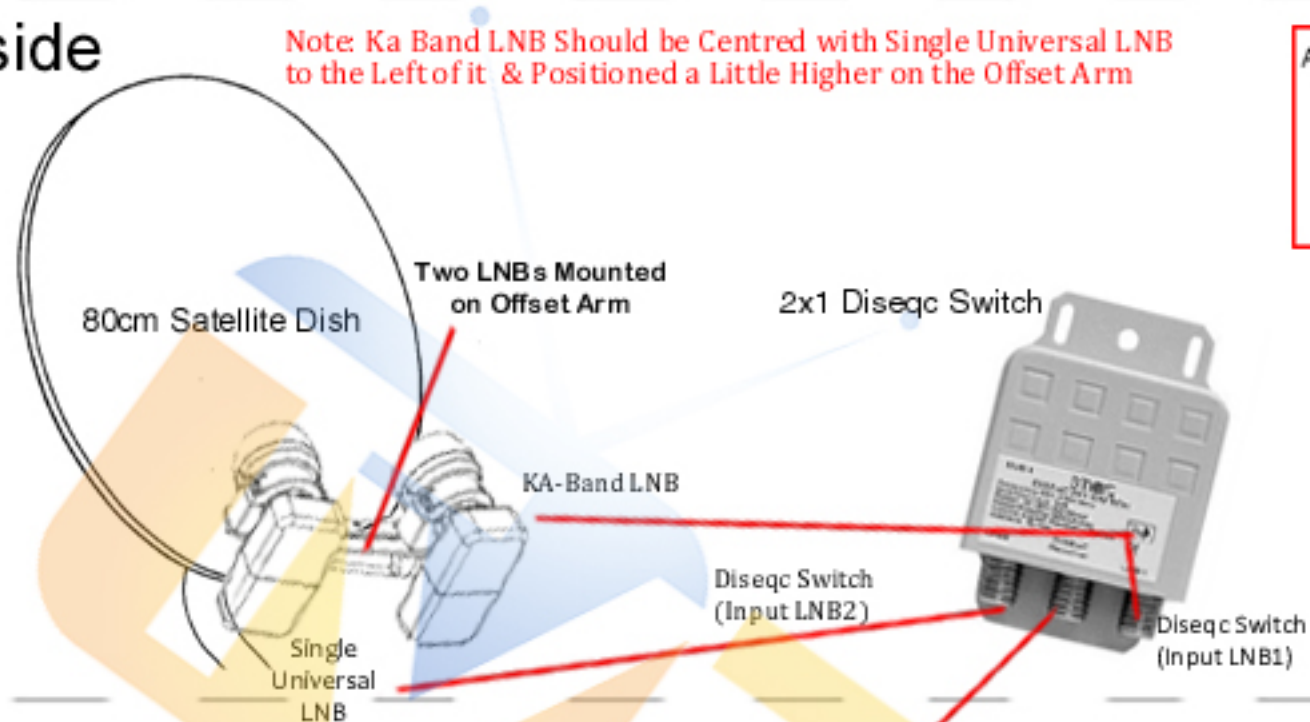

All Connections Using F Type Connectors



freesat

Single Universal LNB is Pointed at Astra2 @ 28.2 Degrees East



Ka-Band LNB is Pointed at Eutelsat @ 9 Degrees East

Note: Diagram is for illustrative purpose only  
It is to show mainly how to set up the diseqc switch

## TV Rooms



Tutorial & Assembly Video Guides Available for all Associated Components  
You can Find the Videos on the Individual Product Pages